
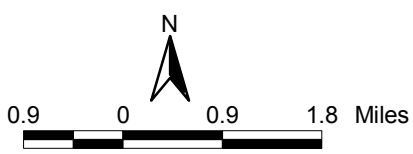


Channel-less swales and valley floors are high infiltration areas.

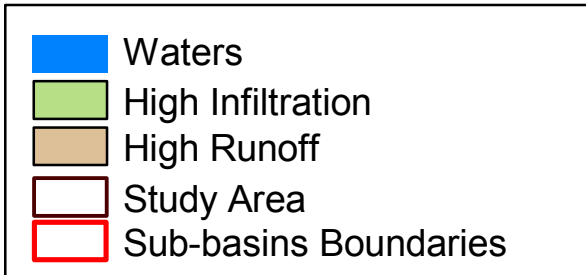

Source: ACOE, PWA 2000 and PCR 2002.

Figure 4
Baseline Conditions Report
Watershed Scale Considerations
Infiltration and Runoff